


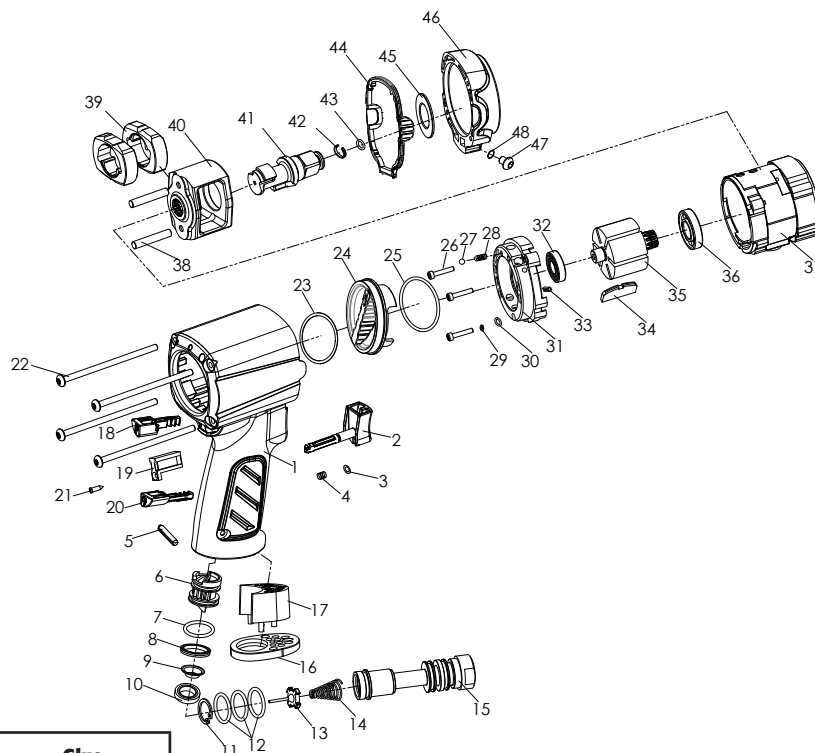

Pos.		Tightening torque (Nm)	Glue
21		0.1 ~ 0.2Nm	N/A
22		2~3 Nm	Loctite 277 0.03ml/pc
26		2~3 Nm	N/A
47		1.5~3 Nm	N/A

Pos.	Artikelnr.	Description	Anz.
34	8958000247	Blade (Set of 6)	1
38	8958000248	Hammer pin (Set of 2)	1
39	8958000249	Hammer dog (Set of 2)	1
40	8958000250	Hammer cage	1
A	8958000251	Anvil kit	1
41		Anvil	1
42		Thrust Ring	1
43		O-Ring (V-P7)	1
B	8958000252	Anvil collar kit	1
42		Thrust Ring	5
43		O-Ring (V-P7)	5
C	8950000146	Bearing kit	1
32		Bearing (R6)	1
36		Bearing (R8)	1
D	8958000427	Trigger kit	1
2		Trigger	1
3		O-ring	1
4		Spring	1
18		Direction bar left	1
19		Locating piece	1
20		Direction bar right	1
21		Screw (ST2.2*L9.5)	1
E	8958000428	Trigger valve kit	1
9		Skeleton	1
10		Valve seat	1
11		Bead flange	1
13		Valve stem	1
14		Spring	1
TK	8958000253	Tune Up Kit (Include 3,4,7,8,10,12,23,25,27,28,34,44)	1

Pos.	Description	Anz.
1	Housing	1
5	Pin (D3*L26)	1
6	Direction button	1
7	O-ring	1
8	Sealing ring	1
12	O-ring	3
15	Air inlet - 1/4" BSP	1
16	Muffle material	1
17	Muffle block	1
22	Screw (M4*P0,7*L74)	4
23	Gasket	1
24	Reverse switch	1
25	O-ring	1
26	Screw (M3*0,5*L14)	3
27	Steel ball (SD 1/8")	1
28	Spring (D3*L10*W0.5)	1
29	V-gasket	1
30	O-ring	1
31	Rear cover	1
33	Spring pin (D3*L10)	1
35	Rotor	1
37	Cylinder	1
44	Ring	1
45	Washer	1
46	Front cover	1
47	Screw	1
48	O-ring (V-S4)	1

	8956001938	Warning Label
	8956000026	Safety Instructions

Recommended Accessories	
Oil for motor lubrication	RCA1000 MOTOR OIL 1L 8955000117